



Delime & Descale Your Dishmachine



- 1) Remove dishmachine detergents from dispensers
- 2) Fill dishmachine with clean water
- 3) **Hot Water Dishmachines:**
 - Single tank dishmachines can run on manual timer for 10 minutes
 - Conveyor dishmachines can run on automatic or manual for 10 minutes
- Low Temp Dishmachines:**
 - Have a delimer switch on control panel (turn switch right to delimer mode)
 - Have machine run for 10 minutes
 - Turn delimer switch back to automatic
- 4) Pour 1/3 gallon of delimer into dishmachine and let machine run for 10 minutes
- 5) This is a great time to run coffee cups through the machine to remove coffee stains - you can also process glasses that have mineral build up that causes hazing
- 6) Drain dishmachine of all delimer and descaler - fill dishmachine with fresh water
- 7) Hook up all chemicals back to dispensers and run dishmachine
- 8) **Important:** You need to run all glasses and cups that were processed with delimer and descaler through the dishmachine after chemicals have been reconnected to dishmachine dispensers

Available in 3 different strengths, in stock and ready for delivery!

20500



Extra Strength

21938



Medium Strength

25275



Mild Strength



ADAMS-BURCH